

# CANDYOFNIE MANUAL

## USER MANUAL FATBOY® CANDYOFNIE

### Product information

The Candyofnie is a ceiling lamp with colourful transparent plastic shades, which can be selected at your own choice and can be stacked onto each other along a single wire. It's a mix & match lamp that suits any environment in your home.

The lamp comes with a LED light bulb specially designed by Fatboy®, which can be stepless dimmed with the included remote control.

The shades can be stacked in different combinations and with many colours to choose from.

The replacement light bulbs are available at [www.fatboy.com](http://www.fatboy.com) or your local Fatboy® dealer and can be replaced by the consumer when it is broken.

The lamp is suitable for 100 to 240 VAC power supplies (50/60hz).

### INSTRUCTION FOR USE AND MAINTENANCE

#### Installation:

- Turn off the power to the light fixture at the main circuit panel.
- Mount the lamp to a rigid surface using 2 screws or anchors.
- Use the right screws & plugs or anchors suitable for the surface you mount it to.
- The lamp is a Safety Class II product. The electrical wires should be connected with a Class II terminal connector block.
- Do not over stack too many shades along the wire. The wire can bear a maximum of 6 kg.
- Mounting the metal ceiling adapter. Adjust the distance between each screw and secure the metal ceiling adapter to the ceiling.
- Attach the shades on the wire. Guide the lamp wire through the holes of each shade. A red sewing needle is included to keep the wire straight. The opening of the shades should face downwards. After stacking the shades, do not forget to include the ceiling cap and the plastic wire clamp.
- The length of the wire can be adjusted by rolling it inside the ceiling cap.

- Secure the wire inside the ceiling cap, with the plastic screw clamp.
- Connect the 2 power wires from the lamp to the corresponding colour of the power supply wires, with the double insulate terminal connector block.
- Lock the ceiling cap onto the ceiling adapter using the two included screws.
- Connecting the light bulb. The connector pins and socket holes are marked with a '+' and '-'. Insert the bulb in the corresponding socket holes and turn clockwise to lock. By inserting incorrectly the bulb will not light up.
- Attach the Fatboy® label to the wire. Or not, that's up to you.
- Pairing: press the '+' and switch on the power.

#### Use (remote is delivered with on/off switch in function):

- Method 1 (default): The power is constantly turned on. The lamp can be fully controlled using the included remote control.

- Starting position: the lamp is switched off.
- Press '+' button shortly: light will turn ON.
- Brightness can be adjusted stepless when pressing and holding the '+' or '-'.
- Press '-' button shortly: the light will turn OFF.

- Method 2: The power to the lamp is controlled by using the wall switch. Open the remote control and change the position of the black switch inside. This will enable the remote control function to dimmer only.
- Use the wall switch to turn the lamp ON or OFF.
- Brightness can be adjusted stepless when pressing and holding the '+' or '-'.

Attention! Candyofnie can not be used in combination with an external dimmer.

**Maintenance:**

- When cleaning or changing the bulb, be sure the lamp is turned off.
- Clean carefully with soft cloth.
- Do not use any cleaning materials that contain chemicals.
- To clean the inside of the shades, hold the wire and carefully slide the shade up so your hand can enter the opening.

**WARNINGS**

- Check the voltage of your power supply. The voltage must be between 100 and 240 V AC.
- Do not expose the lamp to excessive heat from heat sources.
- The lamp is intended for indoor use.
- This lamp is not a toy.

**TROUBLESHOOTING**

- The lamp does not work:
  - Check connection with the power supply.
  - Lamp has not been paired properly to the remote control. Please check pair instructions and try to repeat the steps.

- The bulb has been inserted wrongly. Check if the '+' and '-' marking on the bulb correspond with the same marking inside the socket.
- If one of the bulbs is broken it can be easily replaced, available at [www.fatboy.com](http://www.fatboy.com) or at your local Fatboy® dealer.
- The battery of the remote control is empty. Replace the battery by unscrewing the cover (Type CR2032).
- If the lamp still doesn't work, please contact your Fatboy® dealer.
- Never attempt to repair the lamp yourself.

**TECHNICAL SPECIFICATIONS**

- Model: Candyofnie
- Primary rating (adapter): 100-240 V AC, 50mA-100mA, 50/60 Hz
- Secondary rating: 60V DC/30 mA max.
- LED lamp output: 4W
- Safety Class: Class II
- Ambient temperature: -10 to 40 °C
- Cable length: 180 cm
- Remote control battery: 1 x coin-cell type CR2032

- Materials: Polycarbonate (shades), ABS
- Weight (without shades): 0.5 kg

Important! This luminaire contains a LED light bulb specially made by Fatboy®, which can be replaced by the end user.

The bulb is available at [www.fatboy.com](http://www.fatboy.com) or at your local Fatboy® dealer.

**CE-Directive:**

This product complies with the requirements and other relevant provisions of the current European RoHS and CE directives 2011/65/EC, 2004/108/EC and 2006/95/EC.

**WEEE instructions:**

This product is subject to the provisions of the WEEE directive 2012/19/EU. Do not dispose of this Product together with regular household waste.

Consult your local waste disposal authorities for information on collecting point for electrical and electronic waste products.

**WARRANTY INFORMATION**

Visit [www.fatboy.com/warranty](http://www.fatboy.com/warranty) for information on warranty on your product.

Fatboy® cannot accept any claim on warranty in event of: Damage or defects caused by use, operation or treatment of the product in ways that are inconsistent with normal personal or domestic use; repairs or attempts to repair undertaken by any party other than Fatboy the original B.V.

**THIS MANUAL IN OTHER LANGUAGES?  
GO TO [WWW.FATBOY.COM](http://WWW.FATBOY.COM)**



**DELETING DULL**

