


PORTA TABLE LAMP


INSTRUCTION MANUAL

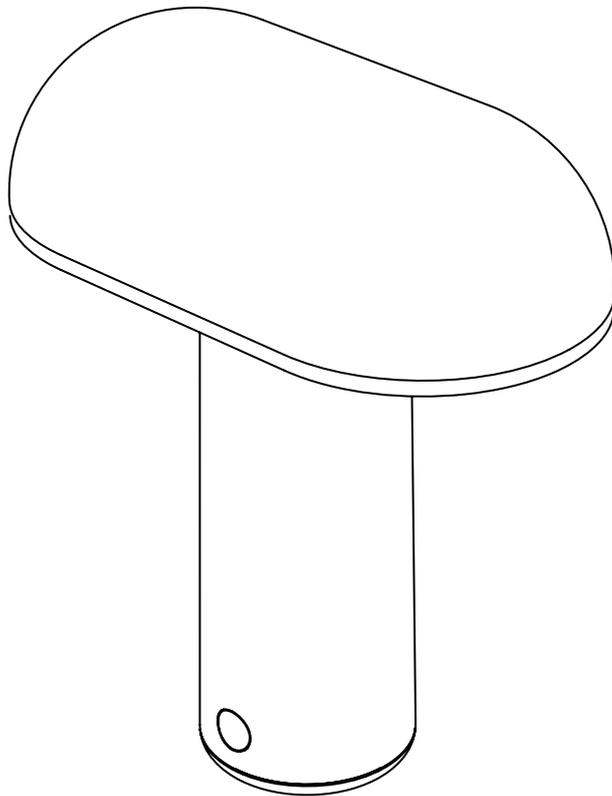


normann

C O P E N H A G E N

1

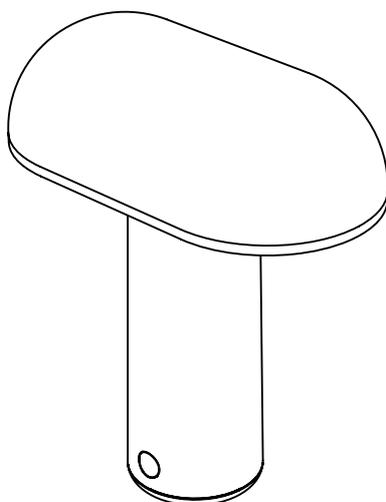

A

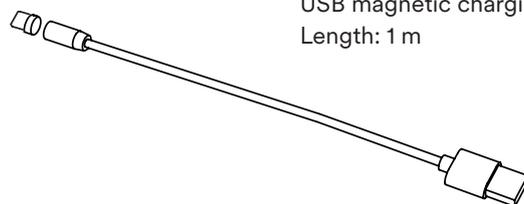

Type C magnetic charging head
USB magnetic charging cable
Length: 1 m

B




Warning:

Choking hazard. Contains small magnetic parts.
This is not a toy. Keep product well out of children's reach.

normann


C O P E N H A G E N

2

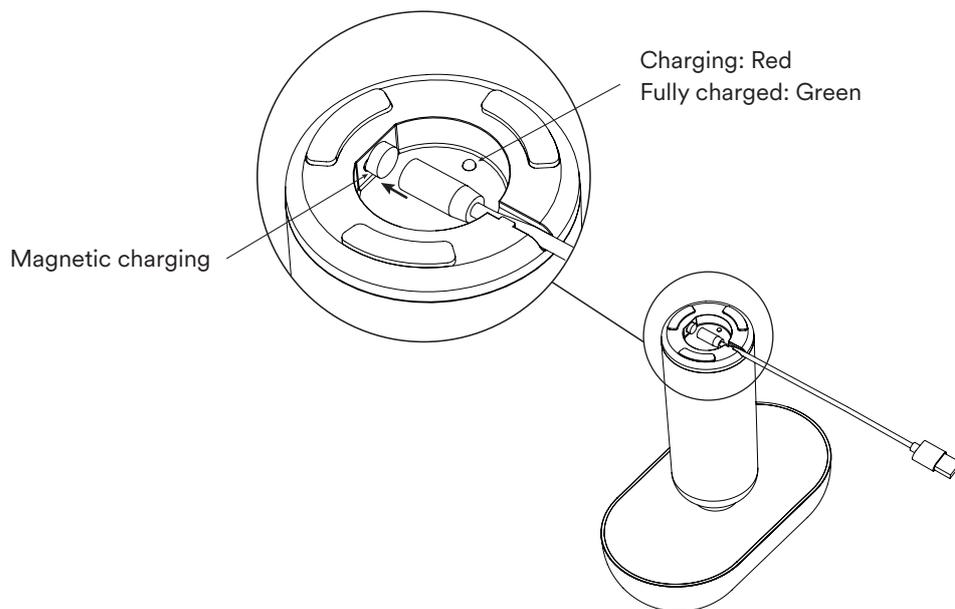

Reduce movement when charging the lamp to prevent the magnetic cable from loosening and causing charging failure.


3

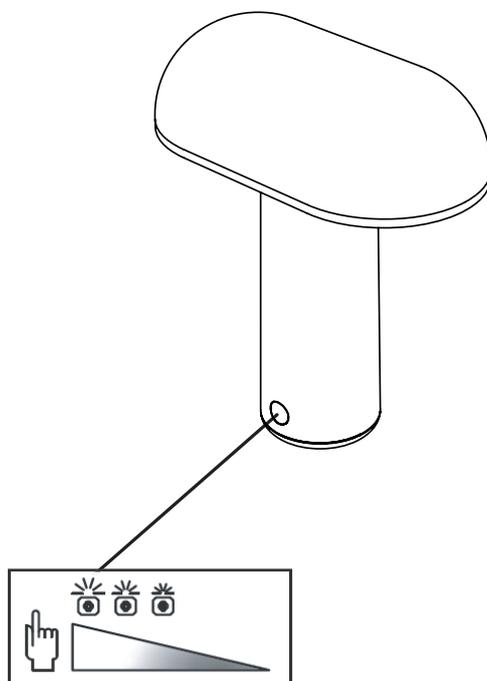


normann

C O P E N H A G E N

4 Battery Removal Operation

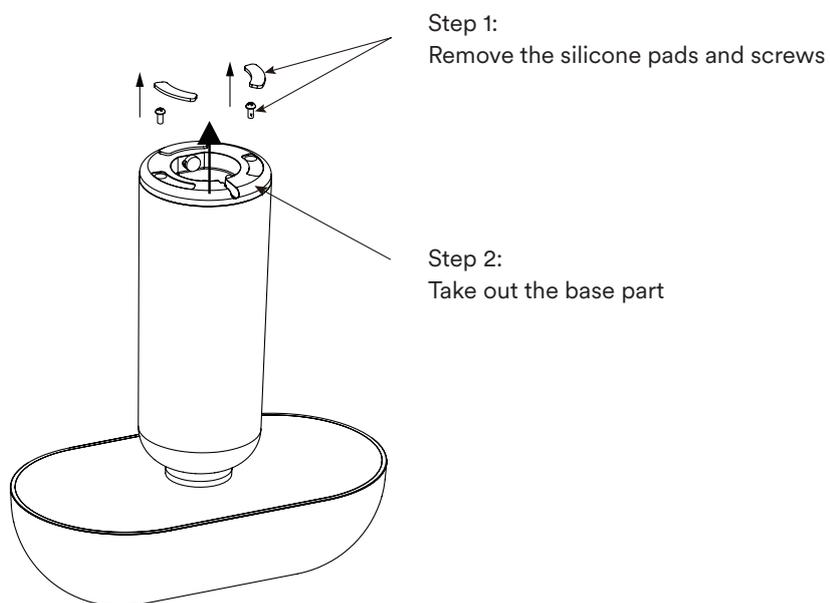

5 Battery Removal Operation

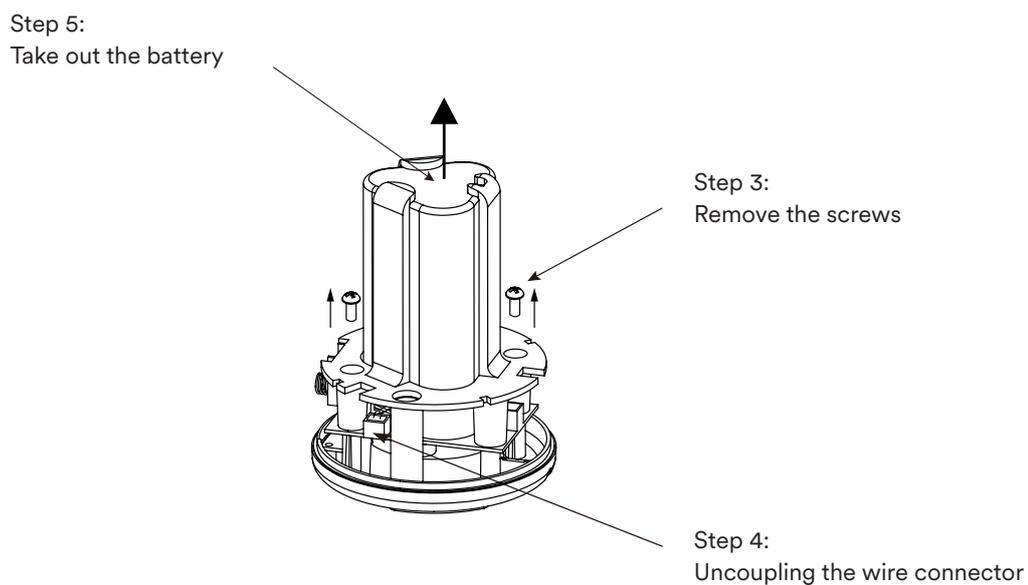

6

General instructions

Please note the information contained in these instructions and save this manual.

Safety precautions:

- The manufacturers do not accept responsibility for injuries or defects caused by improper use of this lamp.
- This lamp is for indoors use only. It can be taken outdoors but must be kept and stored indoors.
- This lamp should only be charged indoors.
- This lamp should only be used in environments with temperatures from 0–45 C°.
- The charging time from 0-100% is 11 hours. Please only use a 5.0V USB power supply or a low voltage drive.
- This lamp has 3 light intensity levels: 100%, 40% and 10%.
- The battery used for this lamp is a 3.7V 6000mAh battery.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.
- Please dispose of plastic bag from packaging and do not allow children to play with it.
- Keep product well out of children's reach.
- Don't switch the lamp on when it's in the packaging.
- If the external flexible cable or cord is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Maintenance instructions:

- Before cleaning, disconnect the power and allow the lamp to cool down for 10 minutes.
- Mind to clean the surfaces of the lamp only.
- Clean the lamp with a soft dry, cloth only.
- If necessary, wipe the surface of the lamp with a soft, damp sponge or cloth, and wipe immediately with a dry cloth.
- Do not use alcohol or other solvents to clean the product and avoid using abrasive or rough sponges.

Advice for environmental care:

Please don't dispose of this article in normal domestic waste after the end of its lifecycle.

Instead, we advise that you dispose of it according to local environmental laws for waste disposal.

The materials are recyclable according to their specifications. With the correct recycling of these materials, you can make a significant contribution to environmental protection.

The battery must be removed from the lamp and disposed of according to local environmental laws before disposing of the lamp.

CE marking:

By affixing the CE marking to a product, a manufacturer declares that the product meets all the legal requirements for CE marking and can be sold throughout the European Economic Area (EEA).



normann

C O P E N H A G E N

7

Allmänna instruktioner

Observera informationen i dessa instruktioner och spara denna manual.

Säkerhetsföreskrifter:

- Tillverkaren tar inget ansvar för skador eller defekter som orsakas av felaktig användning av denna lampa.
- Denna lampa är endast avsedd för inomhusbruk. Den kan tas utomhus men måste förvaras och hållas inomhus.
- Lampan ska endast laddas inomhus.
- Lampan ska endast användas i miljöer med temperaturer mellan 0~45 °C.
- Laddningstiden från 0–100 % är 11 timmar. Använd endast en 5,0V USB-strömkälla eller en lågspänningsdrift.
- Denna lampa har 3 ljusstyrkenivåer: 100 %, 40 % och 10 %.
- Batteriet som används i denna lampa är ett 3,7V 6000mAh batteri.
- Ljuskällan i denna armatur är inte utbytbar; när ljuskällan når slutet av sin livslängd ska hela armaturen bytas ut.
- Kasta bort plastpåsen från förpackningen och låt inte barn leka med den.
- Förvara produkten utom räckhåll för barn.
- Tänd inte lampan när den fortfarande är i förpackningen.
- Om den externa flexibla kabeln eller sladden är skadad, ska den endast bytas ut av tillverkaren, dennes serviceombud eller en likvärdigt kvalificerad person för att undvika fara.

Underhållsinstruktioner:

- Innan rengöring, koppla bort strömmen och låt lampan svalna i 10 minuter.
- Rengör endast lampans ytor.
- Rengör lampan med en mjuk, torr trasa.
- Om det behövs, torka av ytan med en mjuk, fuktig svamp eller trasa och torka genast med en torr trasa.
- Använd inte alkohol eller andra lösningsmedel för att rengöra produkten och undvik att använda slipande eller grova svampar.

Råd för miljövård:

Släng inte denna produkt i vanligt hushållsavfall när den nått slutet av sin livslängd.

Vi rekommenderar att du gör dig av med den enligt lokala miljöföreskrifter för avfallshantering.

Materialen är återvinningsbara enligt deras specifikationer. Genom korrekt återvinning av dessa material kan du göra en viktig insats för miljöskyddet.

Batteriet måste tas bort från lampan och kasseras enligt lokala miljölagar innan lampan slängs.

CE-märkning:

Genom att fästa CE-märkningen på en produkt intygar tillverkaren att produkten uppfyller alla juridiska krav för CE-märkning och får säljas inom Europeiska ekonomiska samarbetsområdet (EES).



normann

C O P E N H A G E N