
# LEE BROOM

# CRYSTAL BULB PENDANT

US: CB0121 / CB0122 / CB0124 / CB0125



### CONTENTS

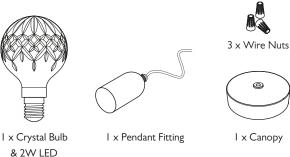

#### ATTENTION! BEFORE YOU START

For safety please read these instructions carefully before you commence install and retain them for future reference.

- Crystal Bulb Pendant must be installed by a qualified electrician.
- Install according to latest NEC wiring regulations.
- Ensure mains power supply is disconnected prior to installation.
- This product is for interior use only and should be installed in a dry environment only.
- Bulb is supplied.
- When switched on Crystal Bulb Pendant may become hot.

# TECHNICAL











## For more information, please contact:

US & Canada Inquiries: +1 212 804 8477 - sales@leebroom.com UK & Global Inquiries: +44 207 820 0742 - info@leebroom.com

# BULB REPLACEMENT

- Visit www.leebroom.com to purchase replacement 2W LED bulbs.
- DO NOT use with a halogen bulb.
- Maximum wattage E26 2W LED, 110-130V.
- Ensure Crystal Bulb is switched off & cooled down before handling.
- For bulb replacement guide please see section B overleaf.

### RECYCLING ELECTRICAL PRODUCTS

Lee Broom encourages all customers to notice this symbol and avoid putting any waste electrical goods in domestic waste bins or containers. Please ensure waste electrical goods are disposed of at a suitable facility.

### CARE AND CLEANING


- Only clean when Crystal Bulb is switched off.
- Please allow a suitable cooling period before cleaning.
- Only use a non-abrasive, soft, dry cloth when cleaning Crystal Bulb.

#### ASSEMBLY

DISCONNECT ALL MAINS POWER SUPPLY WIRES BEFORE INSTALLATION.


I

Separate back plate from the canopy cover by unscrewing the end nut.

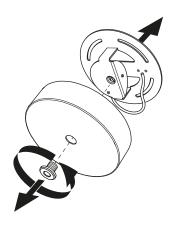

2.

Mount the back plate onto standard 4" octagonal junction box. If you do not have one in the desired position, get your electrician to install one. Fixings not supplied. Suitable junction box bolts should be used.

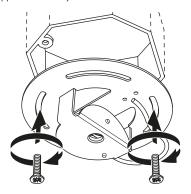


3.

Thread the electrical cord through the end nut and canopy cover.




4.

- a. Loosen the two screws on the cord restraint.
- b. Thread the electrical cord through the cord restraint.
- c. Tighten screws on cord restraint at desired length.

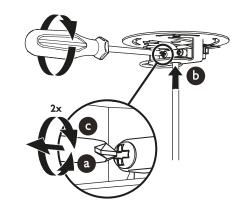


5.

Make electrical connections to the correct wires using the wire nuts provided. This product must be grounded.

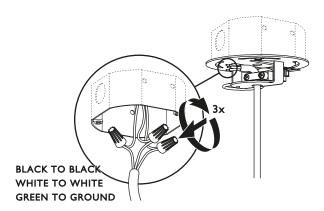

6.

Attach the canopy cover by screwing the end nut into the back plate.

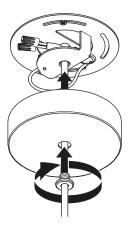

7.

Finally screw the Crystal Bulb unit into the pendant fitting.



# B. BULB REPLACEMENT

- i. Unscrew the Crystal Bulb unit from the light fitting.
- ii. Unscrew the 2W LED bulb from the Crystal Bulb globe.
- iii. Screw new 2W LED bulb into the Crystal Bulb globe.
- iv. Screw the Crystal bulb unit back into the lamp holder.

