

t-3401 LED USA


493034014

Plafón metálico. Luz directa. Difusor de metacrilato en parte inferior.

Metallic flush mount providing direct light. Bottom methacrylate diffuser.



Ø400 mm  
15.3/4"

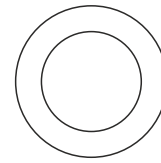

105.5 mm  
4.1/8"



## UL 1598 ELECTRICAL INSTRUCTIONS FOR FLUSHMOUNTS, WALL SCONCES AND PENDANTS

SAVE THESE INSTRUCTIONS. MIN 90C SUPPLY CONDUCTORS. CAUTION-RISK OF FIRE. USE STATED WATT OR SMALLER. CAUTION-RISK OF SHOCK. DISCONNECT POWER BEFORE SERVICING. TO REDUCE THE RISK OF A BURN DURING RELAMPING, ALLOW THE BULB TO COOL DOWN. SUITABLE FOR DRY LOCATIONS ONLY. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARD INVOLVED.

**WARNING:** ALL WIRES AND WIRE NUTS USED IN THE INSTALLATION MUST BE RATED 195F (90°C). FOR INDOOR USE ONLY. THESE PRODUCT MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN.

### Atención: / Warning:

No mirar directamente a los LED.

Do not look directly into any LED source

Bitte nicht direkt in die LED schauen


Ne regardez jamais les ampoules LED directement

### Instrucciones / Assembly instructions

1- Separar la pantalla [A] de la sujeción [B] tirando con firmeza de la brida [C]. Una vez liberada la pantalla, cortar la brida y desecharla. Figura 1. .

1- Remove the shade [A] from the mounting bracket [B] pulling firmly by the plastic band [C]. Once removed, cut the band and discard it. Figure 1.


# 1

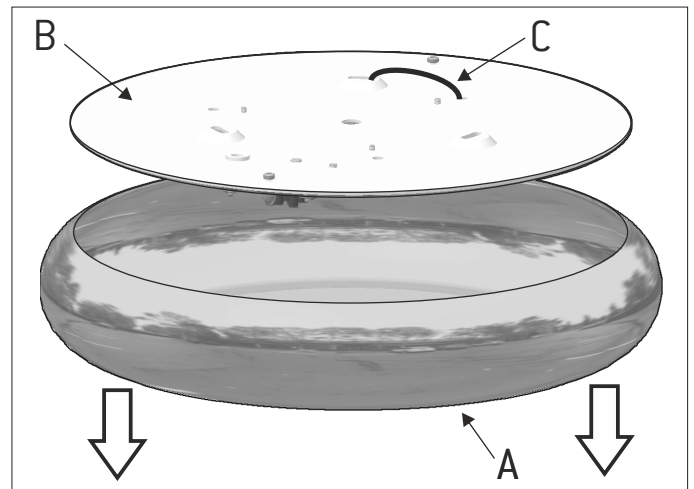

2- Realizar las conexiones eléctricas. Asegurarse de conectar el cable tierra en el lugar correspondiente. Figura 2.

2- Connect the electrical wires. Make sure the ground wire has been correctly connected. Figure 2.

# 2

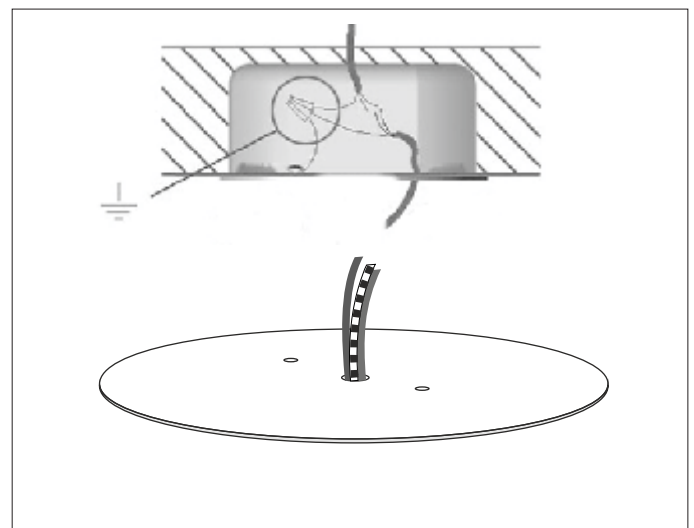


## Instrucciones / Assembly instructions

3- Atornillar la sujeción (B) al techo o en la caja de conexiones. Figura 3.

3- Affix the mounting bracket (B) to the ceiling or to the electrical junction box. Figure 3.

# 3

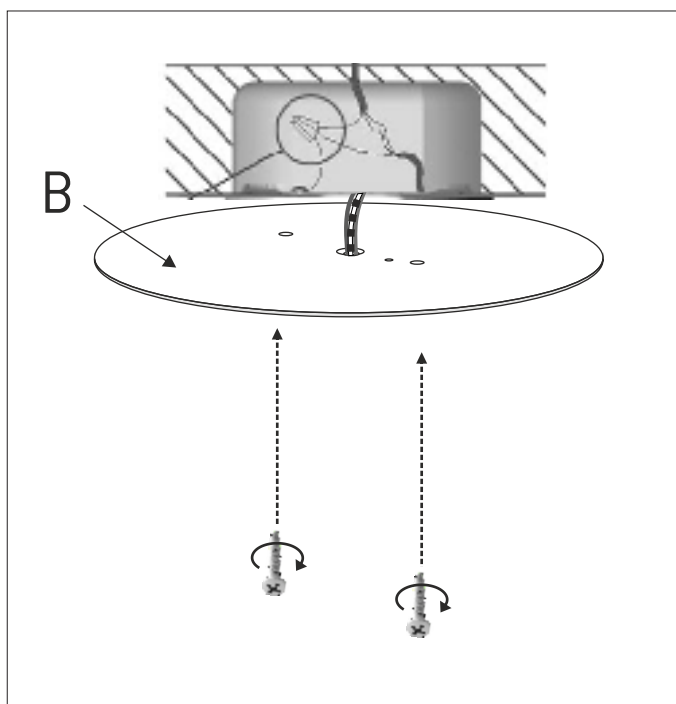

4- Acoplar la pantalla a la sujeción ejerciendo una ligera presión. Los dos pivotes (D) deben encajar en los resortes (E) de la pantalla. Figura 4.

4- Attach the shade to the mounting bracket applying some pressure. The two posts (D) must be inserted into the slots (E). Figure 4

# 4

