



Q.BO C/W

FLUOR 18W G24D2
CLASS I IP 20
DESIGN: C.SERRA

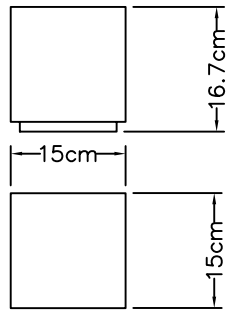

ASSEMBLY INSTRUCTIONS

- 1-Extract the lampshade as it is indicated by the sequence of arrow 1. (fig.4)
- 2-Make the electrical connection and place the lamp base in the desired place.
- 3-Place the lamp and put the lampshade again into its housing.

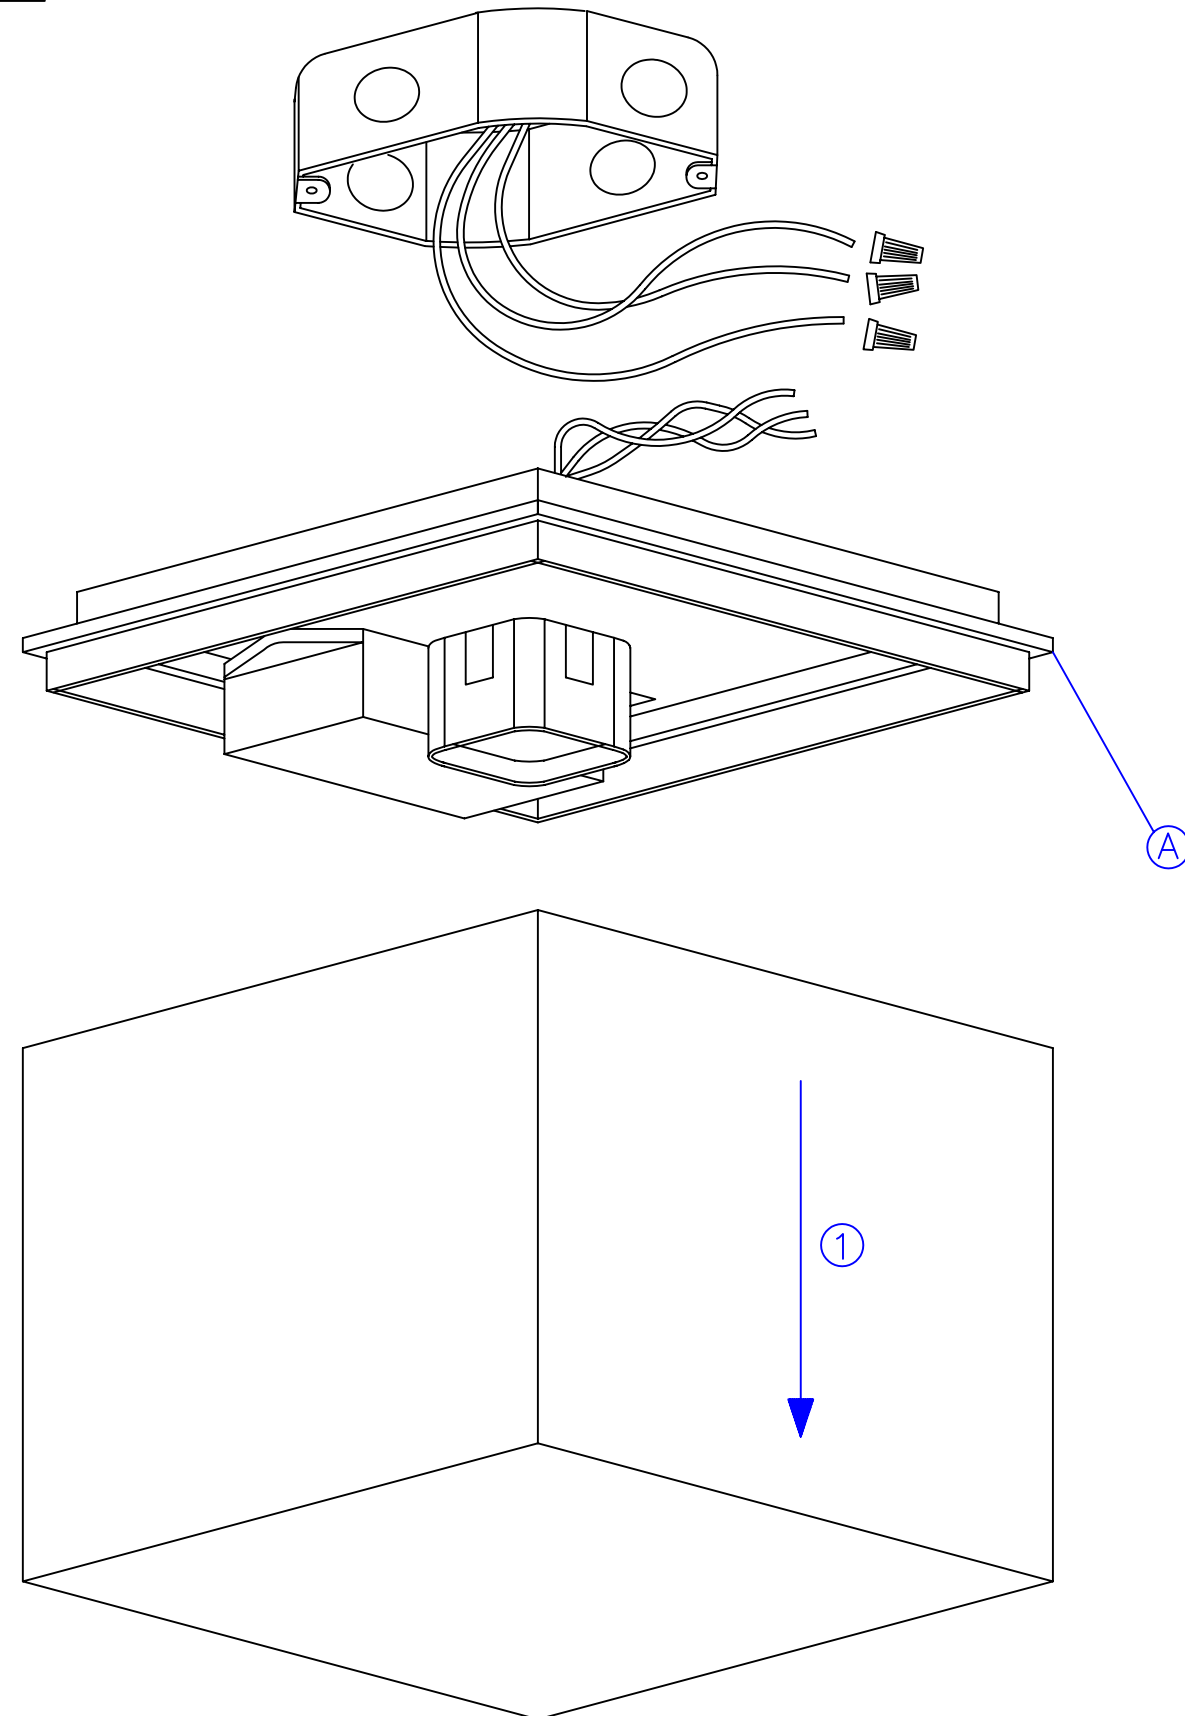

B.lux

EDITED BY
C.SERRA / J.A. HERRERO