



# LEE BROOM


## TUBE WALL LIGHT



### CONTENTS



1 x Tube Wall Light



1 x LED Driver

### ASSEMBLY - please see associated diagrams overleaf


1. Establish the desired location of the Tube Wall Light and mark out the centre of the two wall plates 36 ¼ inches apart. The low voltage electrical cord exits the wall light from one of these wall plates and can be orientated either way up.
2. Fit a junction box aligned with the wall plate where electrical cord exits the wall light (optional since luminaire is low voltage).
3. (A) Fit LED driver within a suitable ventilated junction box up to 32 foot from the location of the wall light. This can be inside the junction box directly aligned behind one of the wall plates if appropriate (check driver dimensions). Connect 120v AC power live and neutral wires to the correct AC input terminals on LED driver. Insulate unused earth wire. (B) If LED driver is wired remotely, run an adequately rated low voltage cord from the LED driver to the wall light location.
4. Disassemble both wall plates from the fitting by removing the two screws from the couplers at both ends of the Tube Wall Light.
5. Separate the back plates from the wall plate covers by unscrewing the coupling nuts. Keep the electrical cord fed through the coupling nut, wall plate cover and back plate.
6. Mount back plates to marked out positions on the wall. Always use the appropriate fixings for the wall material and weight of the product. Fixings not supplied. This is a class 2 luminaire and shall only be mounted on an ungrounded outlet box.
7. Make electrical connections from the wall light to the low voltage cord/DC output terminals of LED driver.
8. Reattach both wall plate covers by screwing the coupling nuts into the back plates. Ensure the screw holes on the side of the coupling nuts align with the screw holes on the two couplers fixed to the wall light.
9. Push excess electrical cord into the junction box before fitting the wall light to the wall plates by locating the couplers into the coupling nuts and tightening the two grub screws at each end.

### ATTENTION! BEFORE YOU START

- Tube Wall Light must be installed by a qualified electrician.
- Ensure AC power is disconnected prior to installation.
- This product is for interior use only and should be installed in a dry environment only.
- Please read the instructions carefully before you commence install and retain them for future reference.

#### • TERMINATE ALL AC POWER WIRES BEFORE INSTALLATION.

#### LED DRIVER



- IMPORTANT! LED DRIVER MUST BE USED, DO NOT WIRE THIS PRODUCT DIRECT TO AC POWER.
- ENSURE TO USE DRIVER BEST SUITED TO DESIRED SET-UP OF THE PRODUCT.

### CARE AND CLEANING

- Only clean when Tube Wall Light is switched off.
- Please allow a suitable cooling period before cleaning.
- Only use a non-abrasive, soft, dry cloth when cleaning Tube Wall Light.

For more information please contact:

US & Canada Inquiries: +1 212 804 8477 - 34 Greene Street, New York, NY 10013 - sales@leebroom.com


UK & Global Inquiries: +44 207 820 0742 - 95 Rivington Street, London, EC2A 3AY - info@leebroom.com

WWW.LEEBROOM.COM




ASSEMBLY


1.

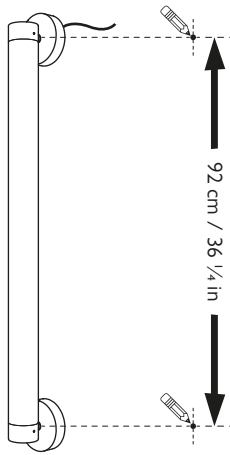


2.

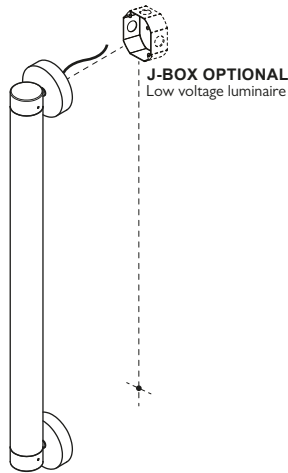


3.

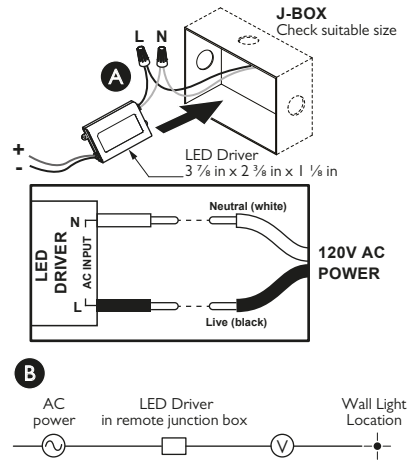


4.

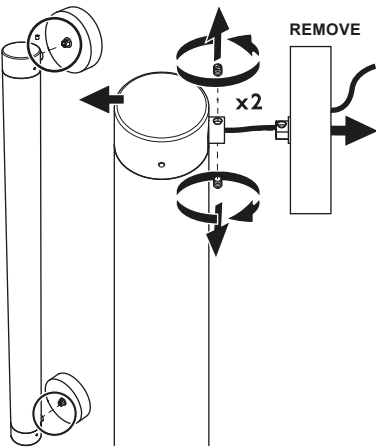


5.

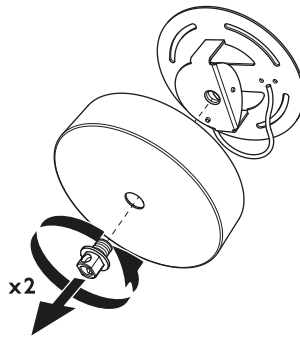


6.

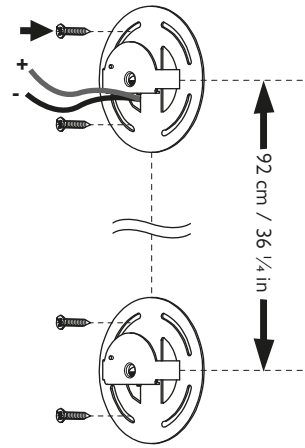


7.

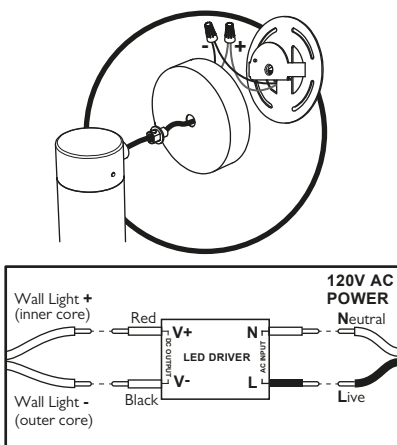

8.

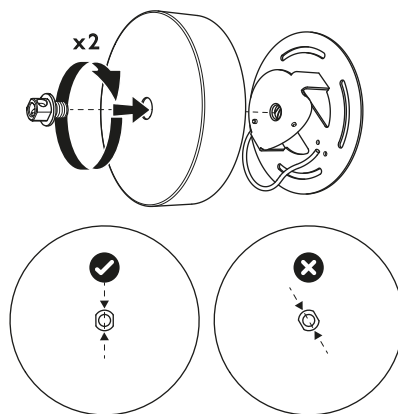

9.

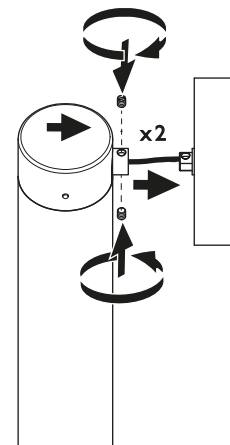

For more information please contact:

US & Canada Inquiries: +1 212 804 8477 - 34 Greene Street, New York, NY 10013 - sales@leebroom.com

UK & Global Inquiries: +44 207 820 0742 - 95 Rivington Street, London, EC2A 3AY - info@leebroom.com

WWW.LEEBROOM.COM

